

YOUR STEP-BY-STEP GUIDE TO GETTING THE MOST FROM TRIMBLE TECHNOLOGY.

MARCH 2025

# **TRIMBLE EARTHWORKS FAQ: Adding a Design**

Welcome to **SITECH SmartGuide & Go** – your go-to resource for quick, clear, and stepby-step guidance on using Trimble technology with confidence. This series is designed to help you navigate common setup tasks, optimise performance, and get the most out of your equipment—without needing to call support.

In this guide, we'll walk you through **Adding a Design - Trimble Earthworks**, with easy-to-follow instructions to ensure you're up and running in no time.

Before you start:

Trimble Earthworks require the folder structure below, create this on your USB.

The screen will not load them if this order is not used.

The design file (.dsz) is placed in the **Designs** folder.

```
ProjectLibrary > Projects > 834 The Yards WM > OfficeData > Designs

Project Library


Projects

834 The Yards WM (Project Name)

OfficeData

Designs
```


#### 1. Select Job Setup tile.

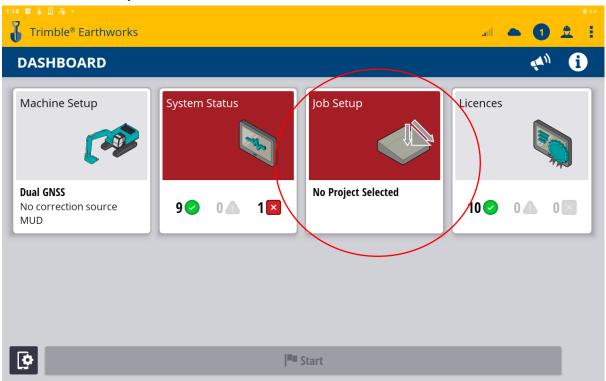

## 2. Job set up page will open. Insert **USB** into screen.

Trimble® Earthworks	** 1 🛓 🚺 📥 🖦
JOB SETUP	i
Positioning Source Dual GNSS	Project None Selected 🗸 🗹
_	No Project available
	Mode Depth and Slope 🗸
X Cancel	<b>«哈</b> File Transfer ✓ Apply



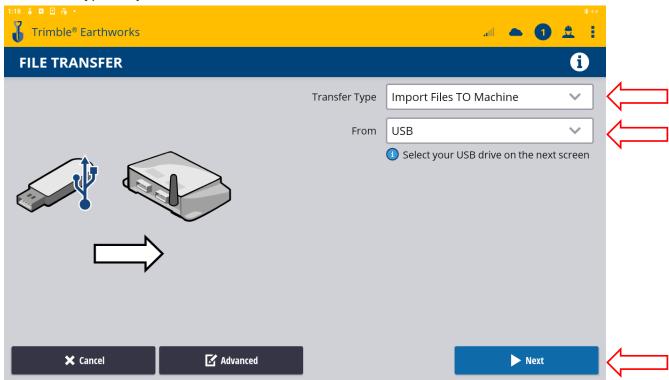

### 3. Transfer type: Import Files TO Machine - From USB. Select: NEXT

4. Android page will open over the app. Select the **menu** icon.

	1:18 🥉	• • • •			أنلأ
$\square$	. ≡	Android	Đ	F	:
	TD540	> Android			
	FILES IN .	ANDROID			■
	()	Can't use this folder To protect your privacy, choose another folder			
		CREATE NEW FOLDER			
		media			
		< ● ■			



5. The page defaults to the TD540, make sure to select the **USB** device.

1:19 🕉 🖬 🖻 🏦 • Open from				*↔ ⊡ = :
<b>TD540</b>				
🔹 🛊 Imation USB drive				
				Download
	•	•	•	

6. Now the USB is highlighted.

1:18 🖡 🖬 🖻 🏦 • Open from				*↔
TD540				
🔹 Imation USB drive				
			ausgeoid2020 61.82 MB 22 Mar	
			B	
		USE THIS FOLDER		
	•	•		



### 6. Select USE THIS FOLDER

1:19 🌡 🖪 🗋 🐴 🔸						*↔					
$\equiv$ Imation USB	drive					🖿 = :					
Imation USB drive	Imation USB drive										
FILES ON IMATION USB DRIVE	FILES ON IMATION USB DRIVE										
24019-1895 CV	Comp test 2	EDR FSL STH IS	Elite Tax Copy	HL MIL Intersec	Komatsu test fo	LOST.DIR					
Machine Contro	ProjectLibrary	System Volume									
5	53	53		к.» к у	<b>K X X X</b>	::					
			<>								
<b>20241119_035</b> 14.16 MB 19 Nov	20241119_040 21.92 MB 19 Nov	20241119_040 21.92 MB 19 Nov	3467J117XT.xml 5.59 kB 21 Nov 2	AllDunn SK235 282 kB 11:56 am	ausgeoid2020 61.82 MB 22 Mar	AWJ 150AWD 0 297 kB 20 Nov 20					
22	8		8	8	8	::					
	Ê			8	Ê						
		, (	USE THIS FOLDER								
		•	•	•							

# 7. Select ALLOW

1:19 🅉 🖪 🖻 🐴 🔸						*↔
$\equiv$ Imation USB	drive					🖻 = :
Imation USB drive						
FILES ON IMATION USB DRIVE						■
24019-1895 CV	Comp test 2	EDR FSL STH IS	Elite Tax Copy	HL MIL Intersec	Komatsu test fo	LOST.DIR
Machine Contro	ProjectLibrary	System Volume				
к ж к м	× 7 × 3	Allow Machine (	Control Plugin to acces USB drive?	s files in Imation	K X X X X X X X X X X X X X X X X X X X	5.3 2.3
		This will let Machine Co stored in Imation USB d	ntrol Plugin access current a	nd future content		
				CANCEL ALLOW		
20241119_035 14.16 MB 19 Nov	20241119_040 21.92 MB 19 Nov	20241119_040 21.92 MB 19 Nov	<> 3467J117XT.xml 5.59 kB 21 Nov 2	AllDunn SK235 282 kB 11:56 am	ausgeoid2020 61.82 MB 22 Mar	AWJ 150AWD 0 297 kB 20 Nov 20
к я к я	5 A 2 S	к ж ж ж ж	к л к л	к я к я	к ж ж к ж ж	5 A 2 S
	B			8		
			USE THIS FOLDER			
		•	•	•		




## 8. Select the drop-down arrow next to Projects

1:19 ¥ ■ □ 译 · <b>Trimble® Earthworks</b>		** • 🛓 🚺 🔺 🗈
IMPORT FILES		i
Se	elect files to Import from USB	
	Projects	
🗙 Cancel	🗘 Replace	🗸 Import

9. Projects now has design file ready to import.

4:33 ¥ ■ 🛛 🛛 • <b>J</b> Trimble® Earthworks		** 4 • 7 ± :
IMPORT FILES		i
Select files t	o Import from USB	
Projec	Its	
	34 The Yards WM	
× Cancel	🗘 Replace	🗸 Import



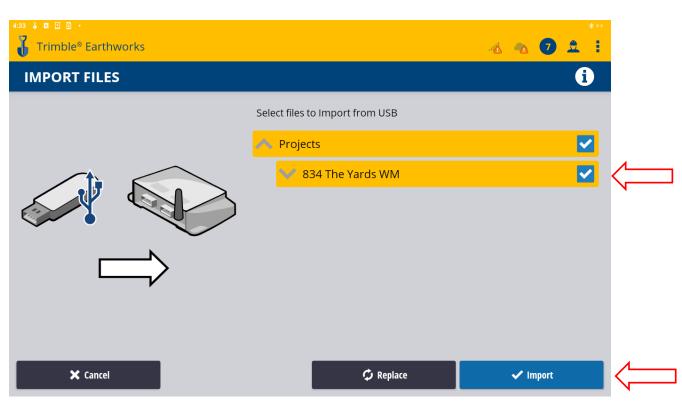

### 10. Select check box. Check the files that you want to import. Then IMPORT

### 11. Files successfully imported press **OK**

4:33 ¥ ■ □ ■ • <b>Trimble® Earthworks</b>		** 1 🛧 🔒 🛓 1	
File imported			
		✓ OK	
	834 The Yards WM		
$\Longrightarrow$			
			-
× Cancel	🗘 Replace	✓ Import	



4:35 🕴 🖻 🖻 -				ni 🔹 🔽	** 1	
JOB SETUP					i	
Positioning Source Dual GNSS		Project	834 The Yards WM	1 🗸	Ľ	
		Mode	Design	~		< <u> </u>
		Measured Data	Data 1.AWJ 150AW	/D 003 🗸	E	
		Design	81 834 BEW SLR 2	02 🗸		
		81 83	34 BEW SLR 202405	28.V01		< <u> </u>
						•
$\checkmark$						
🗙 Cancel	Refresh	¥ <b>G</b> ≁ File Ti	ransfer	🗸 Apply		$\langle$

## 12. Select your project. Select your mode. Select Design. Then APPLY

